


Step 1 - Programming Remote and Direction to the Motor

Switch the motor to programme mode by moving the **BLACK** radio switch to the inside position.
If the switch is already in then switch to out and back to in
The motor is ready to programme for 3 minutes.

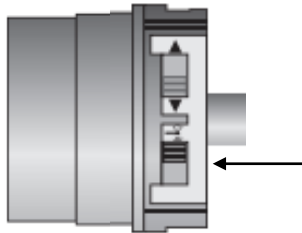

Next press the programme button on the side of the remote for 3secs until the motor acknowledges with a click/clack.
The motor is now in programming mode




Check the running direction of the motor by pressing either up or down button on the remote, if the direction is wrong there are two options to change the direction



OPTION-1 Directional change

Switch the motor direction by moving the **GREY** switch on the motor to the inner or outer position to control direction.

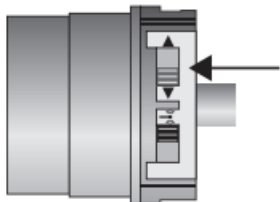

OPTION-2 Directional change

Switch the motor direction using the remote control.
Press the programme button and within the next 3secs press and hold both the up and down buttons together for 3secs until the motor acknowledges with a click/clack



NOTE: Directional change must be done before any limit setting on the motor

Step 2 - Setting End Limits

Upper End Limit

Using the remote control drive the motor to the desired upper limit using the up button and stopping by pressing the middle stop button once you reach it.

Once you have reached your desired limit press the programme button on the side of the remote and while keeping this pressed also press the up button on the remote until the motor click/clacks.

The upper limit is now set.



Lower End Limit

Using the remote control drive the motor to the desired lower limit using the down button and stopping by pressing the middle stop button once you reach it.

Once you have reached your desired limit press the programme button on the side of the remote and while keeping this pressed also press the down button on the remote until the motor click/clacks.

The lower limit is now set.



Your remote is now programmed to use for upper and lower limits

Increasing Limit Positions

Increasing Upper End Limit

Using the remote control drive the motor to the current upper position .

Press the programme button on the side of the remote and while keeping this pressed within 3secs also press the up button on the remote for 10 secs until the motor Click/Clacks to acknowledge.

The upper limit is now deleted.

Now drive the motor to the new upper position.

Press the programme button on the side of the remote and while keeping this pressed within 3secs also press the up button on the remote until the motor Click/Clacks to acknowledge.

The new upper position is now set.



Increasing Lower End Limit

Using the remote control drive the motor to the current lower position .

Press the programme button on the side of the remote and while keeping this pressed within 3secs also press the down button on the remote for 10secs until the motor Click/Clacks to acknowledge.

The lower limit is now deleted.

Now drive the motor to the new lower position.

Press the programme button on the side of the remote and while keeping this pressed within 3secs also press the down button on the remote until the motor Click/Clacks to acknowledge.

The new lower position is now set.



Setting an intermediate position

Using the remote control drive the motor to the desired intermediate position.

Press and hold the stop button and within 3secs also press and hold the travel direction button together until the motor Click/Clacks to acknowledge.

(This can be either the up or down button depending which way you drove the motor)

The Intermediate position is now set.



To drive the motor to the new intermediate position press the travel direction button twice within 1sec (a quick double press)



Deleting limits

Deleting Intermediate Limit

To delete the Intermediate position drive the motor to the Intermediate position.

Now press and hold the stop button and within 3secs also press and hold the travel direction button until the motor Click/Clacks to acknowledge.

The intermediate position is now deleted.



Deleting Upper and Lower Limits

To delete the Upper and Lower limits drive the motor to a position between the Upper and Lower limits.

Now press and hold the programme button and within 3secs also press and hold the stop button for 10secs until the motor Click/Clacks to acknowledge.

The Upper and Lower Limits are now deleted..

